

# Zappiti Remote Control IP Driver

Revision: 1.00

Date: 07 August 2023

## LICENCING

Please visit "<https://shop.ultamation.com/index.php/product/212-zappiti-remote-ip-for-crestron-home>" to obtain a licence key for your Crestron processor.

## ADDITIONAL READING

Please refer to the Using 3<sup>rd</sup> party driver document for instructions on installation and configuration of the driver with Crestron Home/SIMPL.



## MODULE DESCRIPTION

The Zappiti Remote module supports the following functionality:

- ✿ Power Control
  - Sleep
  - Wake
- ✿ Navigation Controls
  - Up / Down / Left / Right
  - Select
  - Back
  - Menu
  - Home
- ✿ Transport Controls
  - Play
  - Pause
  - Fast Forward
  - Rewind
  - Next
  - Previous
- ✿ Colour Buttons
  - Red
  - Green
  - Yellow
  - Blue
- ✿ Number Buttons 0-9
- ✿ Other
  - Info
  - Context Menu (Menu button in UI)

Other useful commands have been added as custom commands which do not show up within the Crestron UI, but can be triggered via actions and events section, under the Zappiti/Overflow folder.

Even though the unit may support additional functionality, this may not be exposed within Crestron Home. Manufacturers should contact Ultamation on [support@ultamation.com](mailto:support@ultamation.com) if they wish additional feature support.

## INSTALLATION NOTES

The Crestron system communicates with the Zappiti device directly via an IP connection. The device must be set to a static IP address, and we would recommend a physical connection between the devices and the network.

The licence key is tied to the processor MAC Address and can be used for multiple instances of the module on the same processor. Therefore, if you have more than one device running Zappiti, you will require only one licence to control all.

## CRESTRON HOME SETUP

1. The driver can be found under Drivers / Streaming Player / Zappiti
2. IP Address is required to match the IP Address of the Zappiti device. This needs to be set to a static IP.
3. Leave port set to 8080 within the Crestron connection set up.

## SUPPORT

If you have any issues with a driver or installation, please let us know by contacting Ultamation support on [support@ultamation.com](mailto:support@ultamation.com) and please include as much detail about your issue as possible, such as a recent processor error log.

Licence verification messages are posted to the error log, so please ensure you have checked this.

## LICENCE

This module (including software, images and all other associated assets distributed as part of the purchased download package) is licenced on a PER PROCESSOR basis.

A licence key is generated at the point of purchase and is linked at that time to specific information that MUST be provided at the time of purchase. A purchase should not be completed without correct information as refunds cannot be issued for errors or changes made to details following purchase.

The licence key for each device will be delivered via email along with links to download the module. There is no physical delivery.

The module is provided without any warranty with respect to the reliability of the controlled device or changes to device protocol. We will endeavour, through best efforts, to maintain the module's functionality and any bug fixes will be provided free-of-charge. Additional functionality may be released as a variation of this module and this will be a separate, purchasable, product.